



S1 □
S2 □ □ S3

ALARM features and setting

- AL indicates that you are in ALARM SETTING mode
- HH:MM
- Alarm and chime indicators [] ; []

From TIME DISPLAY mode, press S2 once to enter ALARM SETTING mode.

- To turn on the alarm, chime, or both, press S3 to toggle among the following options:
 - o Alarm on []
 - o Chime on [] (alarm will sound briefly at the top of every hour)
 - o Alarm and chime on [] ; []
 - o Alarm and chime off
- To set the alarm time, press S1 to select the hour, then press S3 to advance the hour.
- Press S1 to select the minute, then press S3 to advance the minute.

Press S2 to return to TIME DISPLAY mode.

When an alarm sounds, it will continue for 20 seconds. To silence the alarm, press S1 or S3.

FEATURES
Time - Date - Alarm - Chime - 1/100 sec stopwatch LED backlight - Touch tone

BUTTONS
S1: Light / Reset
S2: Mode
S3: Alarm ON-OFF / 24HR toggle

MODES
TIME DISPLAY -> ALARM SETTING -> STOPWATCH -> TIME SETTING

BACKLIGHT activation
Press S1 to activate the backlight.

TOUCH TONE
When pressing S2 to move from mode to mode, a beep will sound.

STOPWATCH features and use

- ST
- Time (MM:SS:1/100s)

From TIME DISPLAY mode, press S2 twice to enter STOPWATCH mode.

- Press S3 to start timing.
- To pause recording, press S3. Press S3 again to continue recording, or press S1 to reset to zero.
- When the stopwatch is running, press S1 for lap time, and again to return to the current recorded time.

TIME DISPLAY features and setting

- AM/PM/24H (PM = PM; blank = AM; 24H = 24-hour "military time")
- Time (HH:MM:SS)
- Alarm and chime indicators [] ; []
- Day and Date (2-letter day abbreviation; numeric date)

From TIME DISPLAY mode, press S2 three times to enter TIME SETTING mode (seconds will flash).

- SECONDS: Press S3 to reset seconds to 00.
- HOUR: Press S1 to select the hour, then press S3 to advance.
- MINUTE: Press S1 to select the minute, then press S3 to advance.
- MONTH: Press S1 to select the month, then press S3 to advance.
- DATE: Press S1 to select the date, then press S3 to advance.
- DAY: Press S1 to select the day, then press S3 to advance.

Press S2 to return to TIME DISPLAY mode.

From TIME DISPLAY mode, press S3 to turn on/off 24H "military time".

BATTERY
Lithium CR2016, 3.0 V (included)

WARNING:
DO NOT DISPOSE OF BATTERY IN FIRE.
BATTERY MAY EXPLODE OR LEAK.

Printed in China