




### A. Features

- ◆ Analog/Digital Display
- ◆ 6 Digit LCD Display (Hour, Minute, Second, Month, Day and Date)
- ◆ Daily Alarm and Hourly Chime
- ◆ Snooze
- ◆ 12/24H Format selectable. Auto Calendar
- ◆ 1/100-second Chronograph with Split Functions
- ◆ EL Backlight


### B. Operations

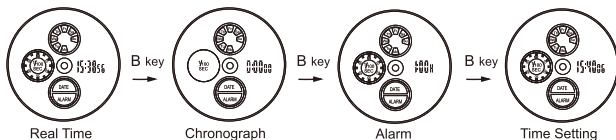

**Light:** Press A to activate the backlight for 3 seconds.

**Analog Time Display:** To set the time, pull the crown and rotate to adjust the hands. When the correct time is displayed, press the crown back firmly against the body of the watch.

#### Real Time Mode (Digital)

- ◆ Press C to display the alarm. Press D to display the date.
- ◆ Turn On/Off Alarm Chime
  - a) Press and hold C, then press D to turn the alarm on or off (ALARM will be displayed when the alarm is set to "on").
  - b) Press and hold C, then press B to turn the chime on or off (all days of the week will flash to dark  when the chime is set to "on").

#### Chronograph Mode (Digital)

- ◆ From Real Time Mode, press B to enter Chronograph Mode.
- ◆ The chronograph can record up to 23 hours, 59 minutes, 59.99 seconds.
- ◆ Press D to start or stop.
- ◆ When stopped, press C to reset.
- ◆ When running, press C to split count. Press D to exit split count, and stop counting.
- ◆ After exiting split count, press C to display all counts, and press C again to reset.
- ◆ When running, press B to return to Real Time Mode, and the chronograph will continue running in the background.

#### Alarm Setting Mode (Digital)

- ◆ From Real Time Mode, press B twice to enter Alarm Setting Mode.
- ◆ Press C to select the hour, and press D to adjust.
- ◆ Press C to select the minute, and press D to adjust.
- ◆ Press C to confirm.
- ◆ Press B to return to Real Time Mode.
- ◆ Alarm Snooze ON/OFF

When the alarm sounds, press C to silence, or press D to snooze. When snoozed, the alarm will sound again 5 minutes later and will automatically stop after sounding for a minute.

#### Time Setting Mode (Digital)

- ◆ From Real Time Mode, press B three times to enter Time Setting Mode.
- ◆ When the seconds are flashing, press D to zero.
- ◆ Press C to select items in the following sequence: Minute, Hour, Date, Month, Day. Then press D to adjust the selected item.
- ◆ When setting the hour, "H" indicates that the display will be 24H "military time" format, while "A" and "P" indicate 12H format (AM and PM, respectively).

Silver Oxide Battery: 377, 1.55 V (for analog movement)

Lithium Battery: CR2025, 3.0 V (for digital movement)

Visit the "manuals" page at [www.collezio.com](http://www.collezio.com) for a video demonstration.

Printed in China.